

Our Austrack Savannah X Forward Fold Camper Trailer



Welcome to your holiday!

We hope you enjoy your stay in our UGG Boot as much as we do 😊 To help you find your way around the camper we've put together this reference booklet that not only guides you through the setup/pack up, but also provides important points to ensure you have a safe and enjoyable holiday.

We hope you enjoy your stay!




Contents

Keys	3
Towing & Coupling	3
Setup	4
Stabiliser legs	4
Opening the camper	4
Internal seating area	11
Awning (optional).....	12
Annex walls (optional)	14
Power	15
Connecting to Mains Power (optional)	15
Battery Power	15
Solar	15
Turn on Power.....	16
Outlets.....	16
Control Panel.....	16
Power Troubleshooting.....	17
Gas	17
Water	17
Bedding	17
Lighting.....	18
Additional lighting.....	18
Kitchen	19
Setup	19
Stove	22
Fridge	22
Hot Water (optional).....	23
TV (DVD, USB and HDMI only – no antenna)	25
Extras.....	25
Pack-up.....	26
Clean the camper	26
Pack up awning and annex.....	26
Turn off gas and power	26
Kitchen pack-up.....	26
Camper pack-up	26

Keys

- Hitch lock key (small silver key)
- Water tank key (large silver key)
- Latch key for all compartments (tagged blue) – fridge, pantry, kitchen, storage, control panel etc
- Camper door and Slide Out key (large triangular key)

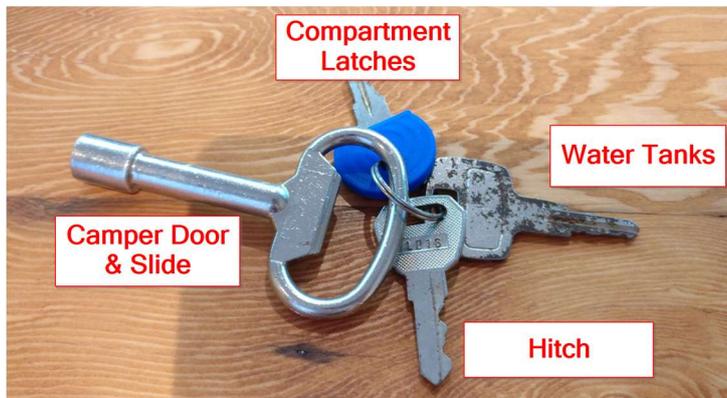

Towing & Coupling

- Hitch
 - McHitch 3500 Kg uni-glide platinum coupling with locking pin
 - Instructions on how to couple the camper to your vehicle will be provided on hire pick up
 - IMPORTANT** – Keep hitch locked at all times unless coupling to vehicle – particularly when unattended.
- Brake Controller
 - Portable Hayman Reese Brake Controller
 - Instructions on how to couple the camper to your vehicle will be provided on hire pick up
 - IMPORTANT** – Always check trailer brake lights and indicators before heading out on the road
- Jockey wheel
 - Ark XO 750 Jockey Wheel
 - Instructions on how to couple the camper to your vehicle will be provided on hire pick up

Setup

IMPORTANT – set-up **MUST** be completed in the following order to ensure the camper and canvas are not damaged.

Stabiliser legs

- There are 4 stabiliser legs on each corner of the camper
- The socket tool used to adjust the height of the legs as well as the wooden boards to support the legs are located in the large pull out drawer on the back of the camper
- Pull the blue oval handle to lower the leg into position
- Attach the socket tool to the centre of the blue handle and spin to lower the leg to the required height
- There is a 2-way level on the front drawer bar of the camper to assist



Opening the camper

1. Unlatch the 2 latches on the boat rack



2. Raise the boat rack to the upright position
3. Use the pins in each leg of the boat rack to lock it in the standing position



4. Unlatch the 6 latches around the camper lid (3 each side)



SCAN for Trailer
Setup video

5. Open lid and push all the way over to rest on the front end of the camper. 2 people can do this easily. There is a winch on the front and back of the camper if required also.



6. Secure the lid with the winch and hook – it doesn't need to be wound tight, just enough to have the lid rest on the black pads at the front



7. Remove the pins on either side of the back spare tires then lower the tires to the horizontal position



8. Pull out the vertical supports



9. Use the triangle key to unlock the locks on the slide out – 2 either side



10. Use the handle in the middle to **carefully** pull the slide out

IMPORTANT – Be very careful not to rip the canvas at this point. We suggest sliding the drawer out approximately 30cm, stop to ensure the canvas is not caught anywhere, then slide out another 30cm. Continue until the slide/drawer is completely open, and do the same when closing the drawer/slide.



11. There are blue pins inside the camper that lock the drawer open. Reach in and confirm these are down on both sides.



12. Pin the vertical supports to the underneath of the drawer slide out



13. Still standing outside the camper, reach in and raise the side poles on the inside of the slide out to lift the canvas into position – no need to extend them at this point



14. Use the triangle key to unlock the door to the camper. Reach in and lift the stairs then lower the door and the stairs at the same time. Secure the canvas strip down the left hand side of the door with the press studs. This helps to not overextend the poles on the inside when raising the canvas into position.



15. Walk inside and raise the 2 main poles in the middle of the camper (either side of the foot of the main bed). A red line has been drawn on the poles to show the ideal raise point.


16. Sit on the bed and extend the poles running up the sides of the main bed. A red line has been drawn on the poles to show the ideal raise point.




17. Raise the 2 poles between the seating area and second bed. A red line has been drawn on the poles to show the ideal raise point.




18. Sit on the second bed and velcro the back bow pole into position. Raise the poles at the end of the slide out to lift the canvas into position. A red line has been drawn on the poles to show the ideal raise point.

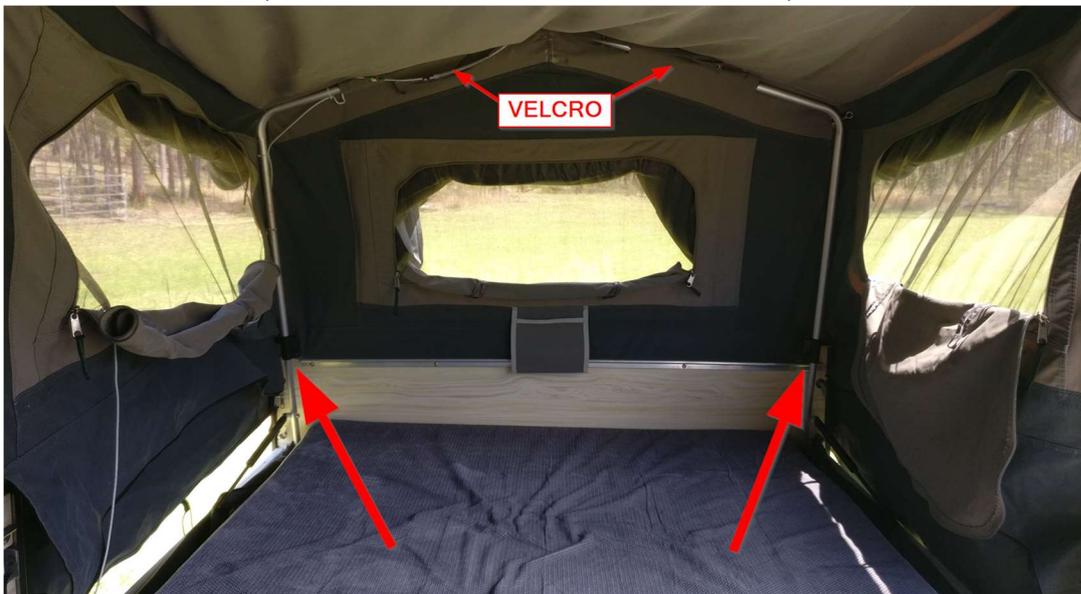

19. On the inside of the pantry door is a diagram for all internal poles

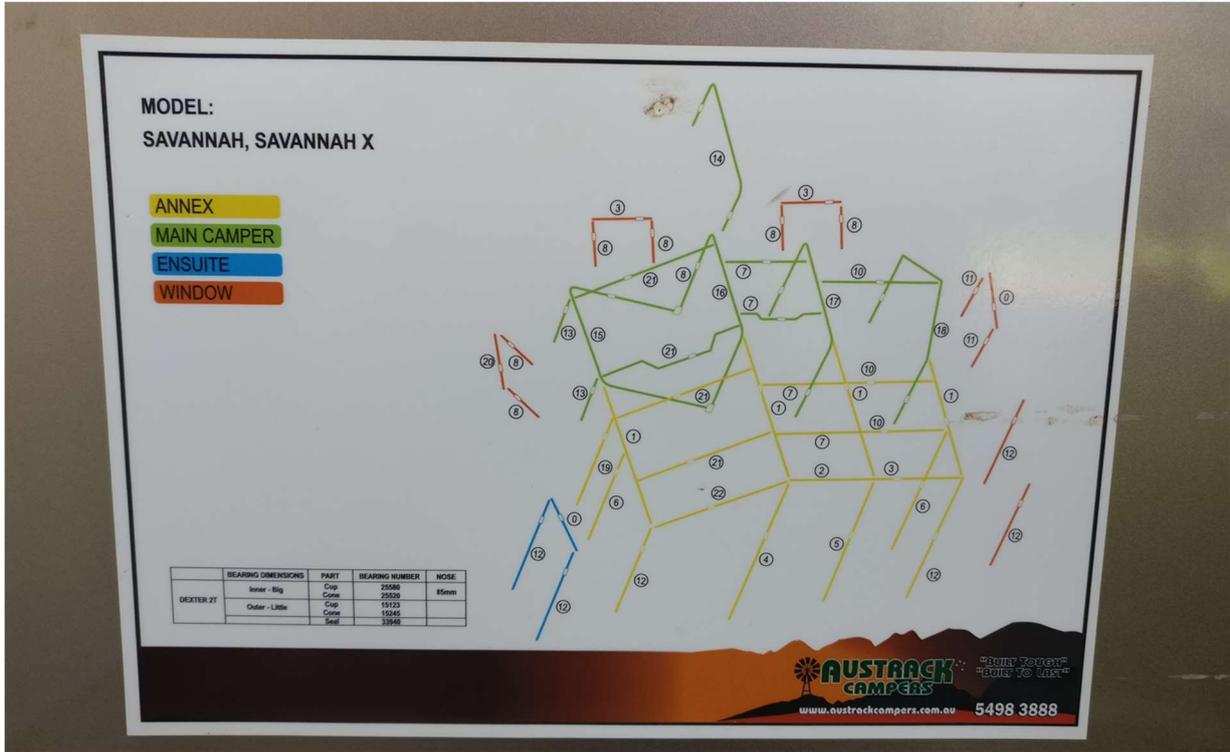

20. The main tent poles (green) are located between the seating and second bed. Brace the roof in the 3 sections of the main tent with the green poles – numbers 7, 7, 10, 21, and 21.

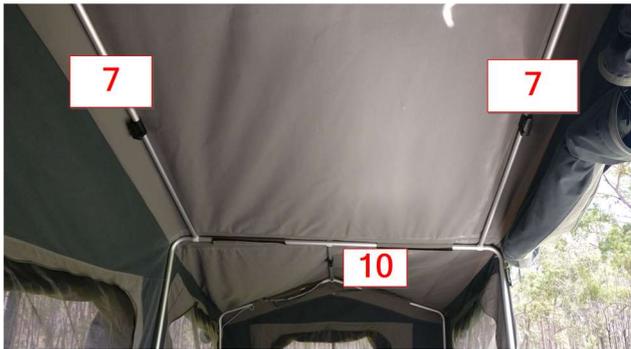

21. Move outside and arrange the corners of the canvas over the edge of the slide out

22. Raise the canvas flaps on either side of the slide-out and zip to the lower piece



23. Velcro at the end of the zipper then press stud the end of the canvas to the outside of the camper

24. Move inside and ensure again that the blue pins are dropped into the slide-out to hold it in position (one on either side of the bed at the end of the zippered section).



25. The window poles (red) can be used to stretch out the window canvas to allow ventilation and protect from sun/weather. Alternatively, the window outer canvas can be unzipped at the sides and rolled up.



26. The windows are all double canvased so can be opened/closed from both the inside and outside.

Internal seating area

IMPORTANT - Please keep the carpet on the internal floor

- An **optional back rest** can be raised for the seat that runs along the second bed. Remove the long seat cushion, lift the back rest, then replace the seat cushion and add the two back cushions.



- The **table** can be used either inside or outside.

IMPORTANT - If the table is kept outside, please store under the awning to ensure it's not exposed to the weather.

Awning (optional)

1. The awning and annex poles are marked **yellow**
2. Use the pole diagram inside the pantry door for pole locations
3. Start with the main poles that come out 90 degrees to the camper (4 in total). Use the hook end to attach them to the camper. Lean the other end on the ground for now.



SCAN for Awning & Annex setup videos

4. Starting on the right hand side, use the Velcro to roughly hang the first meter or so of awning. Begin the zipper, adjusting the Velcro behind the zipped section as you go.





5. Velcro the awning to each of the poles



6. Add the vertical poles and spreader poles as per the pole diagram. Stretch the small hooks on black elastic bands down into the holes in the poles to secure the canvas.



7. Add all other bracing poles per the pole diagram
8. Always secure ropes to the awning to prevent damage in wind



Annex walls (optional)

- There are 4 optional annex walls that can be added individually or all together to suit your setup and weather conditions.

Power

Connecting to Mains Power (optional)

- A 15m 15A cable is provided to connect to mains power when at a powered campsite
- The mains power port is on the back of the camper to the left of the boat rack legs



- Mains power will charge the batteries that are then used to power the camper

Battery Power

- The batteries will be fully charged at time of hire pickup
- The Control Panel will show you the charge of the batteries. Flip to the Control Panel section of this document to learn more.
-

Solar

- 200W folding solar panel
- Connect the solar panels to the Anderson plug on the trailer drawbar



Turn on Power

- Turn on Main Switch in the control panel on the back of the camper



Outlets

- 2 x USB ports inside the camper
- 2 x 240v sockets inside the camper
- 2 x USB ports above pantry door outside camper
- 1 x 12v socket above pantry door outside camper

Control Panel



- 2 gauges at the top show the water level in each tank
- Numerical display
 - **Red** number shows the current volts within the batteries
 - **Blue** number shows the current power drawing from the batteries (in amp hours)
- Colour bar on the right shows the current state of battery charge – always keep in green

Power Troubleshooting

Follow the below steps for any power issue:

1. Check the connection to camper (if on mains power)
2. Ensure the main power switch (**red** switch in control panel) is on
3. Ensure the individual switch in the control panel for the area requiring power is on. Use the reset button above the switch if required.
4. **Make sure the batteries are not to go below 12.00v otherwise you should charge via a power plug or via the Anderson connection to your vehicle.**

Gas

- 2 x 9kg gas bottles are located at the front of the camper behind the stone guard
- Hire will always include at least one full gas bottle
- In between the bottles is a dual hose regulator with changeover valve. Always ensure the changeover valve points towards the gas bottle in use



IMPORTANT - Always ensure the gas is turned off when not in use (especially when away from the campsite or sleeping)

IMPORTANT - If only one gas bottle is connected, centring the changeover valve will open the line and effectively drain the gas into the air. Always keep the valve pointed to the gas bottle in use.

Water

- There are 2 food grade poly water tanks (120L and 50L)
- Tanks can be filled at the entry points on the back of the camper either side of the boat rack legs (key required)

IMPORTANT - ALWAYS use the **blue** drinking water hose to fill the tanks

- Ensure power to both pump 1 and pump 2 is switched on within the control panel on the back of the camper

Bedding

- 2 x Double beds (second converts to Queen if utilising seating area also)
- Mattress protectors are cleaned prior to hire. These must remain on the mattresses at all times.

Lighting



- Internal LED strip lights are located in the centre and slide out end of the camper
- Connect the lights to the ports on the internal back wall



- Light switches are located just inside the camper door and also next to the port for the light in the slide-out
- The light above the kitchen sink is switched on using the 'external' switch located just inside the camper door

Additional lighting

- There are a few additional lights provided within the under seat TV storage compartment

Kitchen

Setup

- Open the kitchen cavity with the press locks and **blue** key
- Open the blue latches and lock in the upright and inward position




- Use the top handle to carefully pull out the kitchen
- Release the kitchen stand from underneath using the button



- Extend the legs to the ground on an angle towards camper then tighten
- Slightly lift the end of the kitchen slide-out to bring the legs more upright and level the top
- Flip open the workbench so that it's to the rear of the stove
- Carefully raise the dishrack on the sink to the upright position. The bottom shelf will fold out straight away.



- Remove the locking pin on the left of the middle rack, tilt the racks into position, and lock on the front one

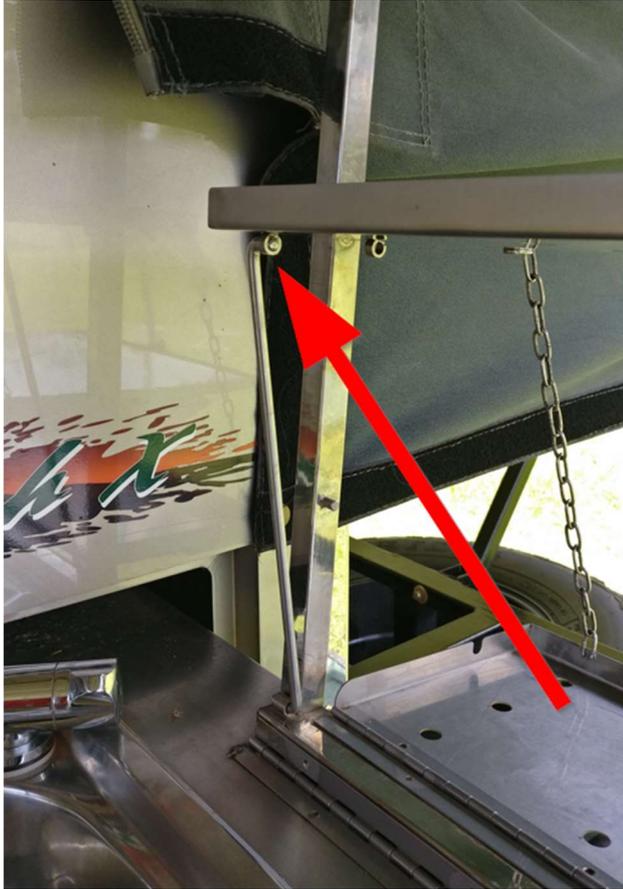

- Raise the light
- Raise the tap
- Connect the blue water hose (found in the sink) to the sink first, then connect to the camper at the connections shown below. Connectors just push in like a hose.




- Use the metal gas hose to connect to the kitchen first, then run the hose underneath the sink and connect the other end to the bayonet on the end of the camper



- Plug the 2 black cables from the sink into the ports on the camper to connect the light

- Open the storage compartment under the sink. Grab the grey drainage hose. Connect one end to the sink (within the storage compartment), and place the other end in a bucket on the ground. The hose runs straight down through the bottom hole in the compartment.

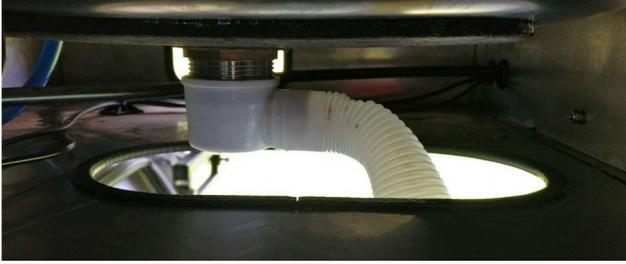

Stove

- Raise the stove cover to the upright position
- A fire lighter is available within the cutlery drawer under the stove as the switch igniter is not operational
- Turn the gas knob and use the fire lighter to light the flame

IMPORTANT – Always wait 15min after stove use before closing the cover


Fridge

- Open the fridge cavity with the **blue** key and press locks
- Push down both blue latches and pull the drawer open

IMPORTANT – Ensure the fridge cable on the right does not get caught when opening and closing the fridge slide



- The fridge is a Kings 90L dual zone
- The temperature of each zone can be set independently
- Temperature is set using the + and - buttons on the front panel (left and right compartments shown below)

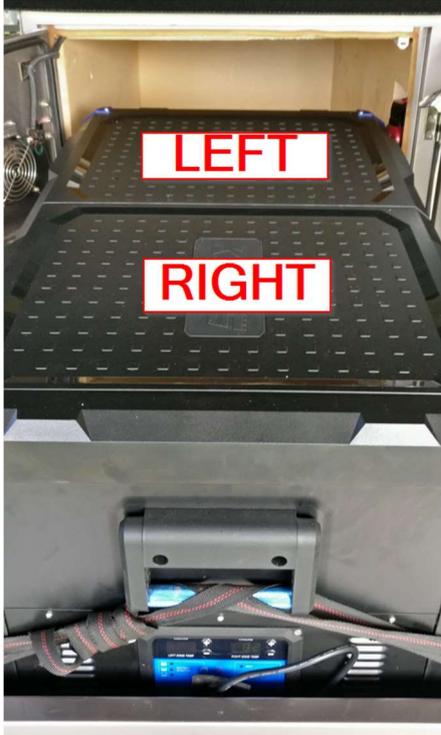


- Lids can be opened from either side, or removed altogether. Ensure the fridge slide is pulled all the way out so the back lid clears the camper when opened.
- To turn off one section of the fridge, press and hold both the + and - buttons together

IMPORTANT – Always ensure the latches on the fridge door are locked when leaving the camper unattended

Hot Water (optional)

- The gas hot water system is located in the large pull out drawer on the other side of the camper
- A stake has been provided to stand the system upright and off the ground
- There are 3 hoses that come out of the system
 1. Gas hose to connect to the camper trailer draw bar

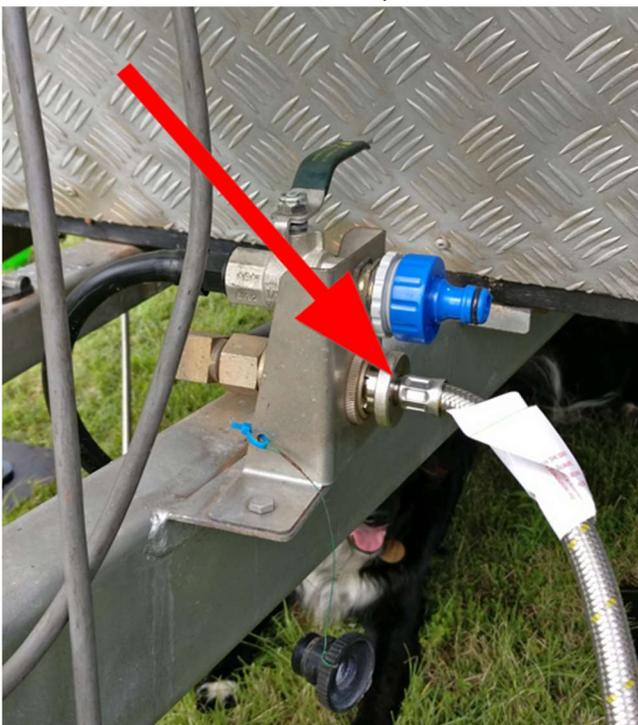

2. Water hose to connect to the back of the camper trailer (to the right of the boat rack legs)



3. Water hose to the shower



- Turn the switch on underneath the hot water system. This turns on the ignitor. The ignitor is driven by batteries within the white container (also in picture below) that can be replaced if required.



- Ensure the gas is turned on at the bottle
- Turn the water and gas dials to the red line




- The water can be turned on and off from within the shower on the shower rose

TV (DVD, USB and HDMI only – no antenna)

- The TV is located in the under-seat storage compartment closest to the door
- Remove the seat cushion and carefully open the compartment
- Lift out the TV and raise the support arm.

IMPORTANT – The support arm is partially held upright with the compartment lid therefore always hold the TV when opening and closing the compartment

- Power must be turned on using the **All Power** switch near the camper entry
- USB and HDMI ports are available on the back of the TV
- There is no remote so please use the buttons on the back of the TV
- The **Channel** and **Volume** buttons can be used to navigate through the menus if required.

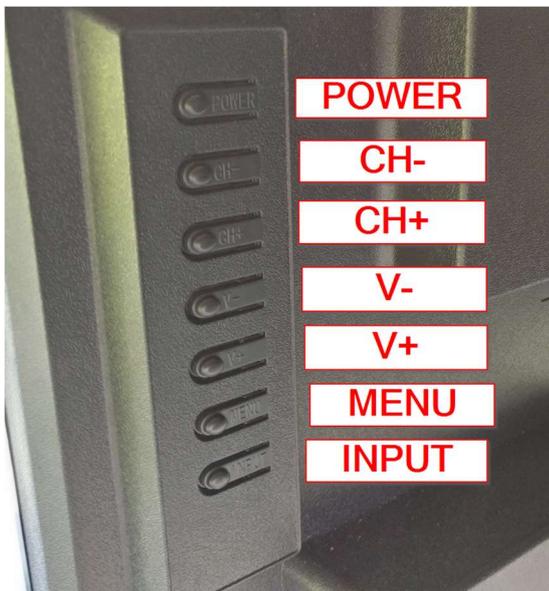

Extras

- In the under seat storage compartment directly in front as you walk in the door are a few items to help make your stay more enjoyable
 - Playing cards
 - Tissues
 - Laundry Powder
 - Insect Repellent
 - Assorted books

Pack-up

IMPORTANT – pack-up **MUST** be completed in the following order to ensure the camper and canvas are not damaged.

Clean the camper

1. Camper must be cleaned both inside and outside

Pack up awning and annex

1. Pack up the awning and annex (if required)

Turn off gas and power

1. Turn off both gas bottles
2. Disconnect from mains power if required

Kitchen pack-up

1. Turn off the pump to the kitchen
2. Turn off the gas at the gas bottle
3. Remove the water and gas hoses and place in the sink
4. Remove the black light cables and poke back into the hole in the kitchen slide out so they don't get caught
5. Move the sink tap down into the sink
6. On the dishrack, move the pin back to the middle hole, fold up the shelves and lie the rack flat on the kitchen sink
7. Lower the light to lie flat next to the dishrack
8. Fold the rear preparation bench and place over the stove
9. Ensure the blue latches are locked open
10. Raise the legs and use the pin to lock back into position under the kitchen
11. Use the top handle to carefully slide the kitchen drawer back into the cavity
12. Lock the blue pins in place then close and lock the hatch

Camper pack-up

1. If you are packing up ready for hire return, ensure all belongings are removed from the inside of the camper (be sure to check the sides of the beds and under seat storage)
2. Mattress protectors can remain on the beds
3. Unplug all lights and loop cables up into canvas



4. Remove TV from support arm, wrap in white non-slip matting provided and carefully store in under seat storage
5. Zip closed all internal and external windows

6. Unzip the canvas on either side of the slide out and unlock the blue pins



IMPORTANT – Ensure all canvas from the lower side of the zip is tucked in underneath the mattress to ensure it does not catch and rip when sliding the drawer back in

7. Inside the camper, remove all the green spreader poles (including the 2 low ones at the head of the main bed) and place in between the seat cushion and the second bed mattress
8. Lower all vertical poles to their lowest position
9. Undo the Velcro from the poles at the end of the second bed
10. Place all cushions except for the long seat cushion on the floor. Fold up the table and rest it on the supports in the middle.

IMPORTANT – ensure the table and cushions are arranged so that the slide out can be pushed in over the top of them



11. Raise the stairs carefully into the camper and close and lock the door
12. Check the slide out again ensuring all canvas has been unzipped, blue latches are up, canvas is loose and clear of the edges that will be sliding back in
13. Remove the pins from the vertical supports under the slide out (attached to the spare tyres) and lower the supports. Put pins back in to lock the supports back in place
14. Very carefully slide the drawer back into the camper. We suggest slowly sliding the drawer in approximately 30cm, then stop to ensure the canvas is not caught anywhere and the drawer is easily sliding over the table and cushions in the middle of the camper, then slide in another 30cm. Continue until the drawer is completely closed.
15. Lock the slide out closed with the triangle key
16. Raise the spare tyres and lock them into place using the pins
17. Remove the winch hook from the front of the trailer
18. Lift the main bed section of the camper and fold backward over to the rear end of the trailer
19. Ensure all canvas is tucked into the trailer
20. Close the 6 latches around the camper trailer lid
21. Remove the pins from the legs of the boat rack and fold down over the top
22. Latch the boat rack in place with the 2 latches
23. Close and lock all latches around the camper